


Part No.	Hose Size	Thread „T“	A max. [mm]	B max. [mm]	C max. [mm]	I [mm]	SW ₁ [mm]	SW ₂ [mm]
----------	-----------	------------	-------------	-------------	-------------	--------	----------------------	----------------------

Serie 4000/8000

8046-06D	8000-06D	9/16-18 UNF	37,7	14,1	22,8	7,2	17,4	17,0
8046-08D	8000-08D	3/4-16 UNF	47,1	16,4	26,9	9,6	22,0	22,0
8046-10D	8000-10D	7/8-14 UNF	54,2	20,2	33,4	12,0	25,4	24,0
8046-12D	8000-12D	1-1/16-12 UN	59,8	20,0	34,1	14,7	32,0	30,0
8091-06D	8000-06D	9/16-18 UNF	43,3	19,6	28,2	7,2	17,4	17,0
8091-08D	8000-08D	3/4-16 UNF	54,8	24,2	34,7	9,6	22,0	22,0
8091-10D	8000-10D	7/8-14 UNF	57,9	27,62	40,8	12,0	25,4	24,0
8091-12D	8000-12D	1-1/16-12 UN	68,7	31,0	45,2	14,7	32,0	30,0
8120-06D	8000-06D	9/16-18 UNF	50,9	25,3	33,9	7,2	17,4	17,0
8120-08D	8000-08D	3/4-16 UNF	65,0	33,2	43,8	9,6	22,0	22,0

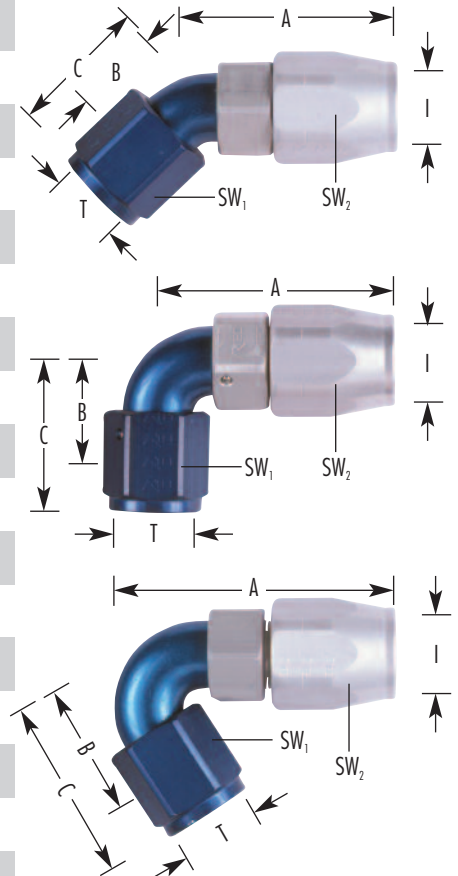

Ersatzsocket / Spare Socket



So-8000-06D-R
So-8000-06D-G
So-8000-08D-R

So-8000-08D-G
So-8000-10D-R
So-8000-12D-R
So-8000-16D-R

Part No.	Hose Size	Thread „T“	A max. [mm]	B max. [mm]	C max. [mm]	I [mm]	SW ₁ [mm]	SW ₂ [mm]
----------	-----------	------------	-------------	-------------	-------------	--------	----------------------	----------------------

Serie 4000/8000

8150-06D	8000-06D	9/16-18 UNF	53,3	30,5	39,1	7,2	17,4	17,0
8150-08D	8000-08D	3/4-16 UNF	67,0	39,0	49,5	9,6	22,0	22,0
8180-06D	8000-06D	9/16-18 UNF	56,3	33,4	42,0	7,2	17,4	17,0
8180-08D	8000-08D	3/4-16 UNF	70,0	40,8	51,3	9,6	22,0	22,0

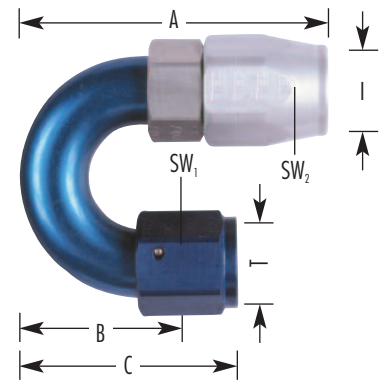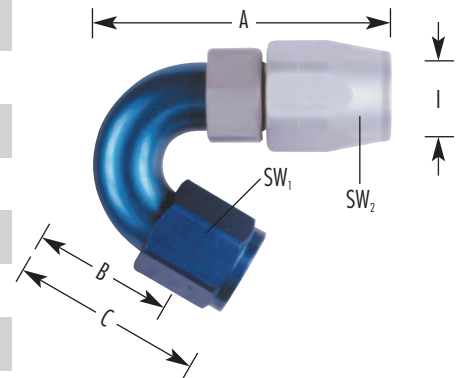

Ersatzsocket / Spare Socket

So-8000-06D-R
So-8000-06D-G
So-8000-08D-R

So-8000-08D-G
So-8000-10D-R
So-8000-12D-R
So-8000-16D-R